

LoRa CHAT — User Manual

Point-to-point chat over LoRa. No internet, no SIM card.



Wi-Fi network

Name: **LoRa_CHAT_A** Password: **12345678**

1. Turn on the LoRa CHAT unit and wait a few seconds for its Wi-Fi to start.
2. On your phone, open Wi-Fi settings and connect to **LoRa_CHAT_A** using the password above.
3. Open your phone's browser and go to **192.168.4.1**.
4. Type your message in the chat page and tap **Send**. It's carried over LoRa to the other unit and appears on their screen the same way.

This Wi-Fi network is created by the unit itself — you don't need an internet connection for the chat to work.